


Controls and Status Indicators

Shown below are the controls and indicator lights on the RG Battery Backup.


1 Power on/off

Power on/off switch is located on the back panel. Use this switch to turn the RG Battery Backup on/off. The unit will not supply power to the AT&T U-verse Residential Gateway when power switch is in OFF position.

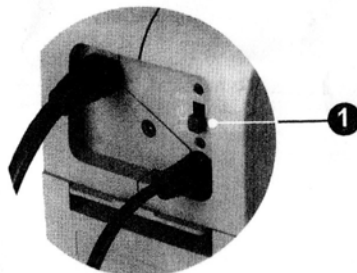

2 Status Indicators

Three LED status lights are located on the front panel. The status lights indicate specific conditions of the device. (See page 6.)

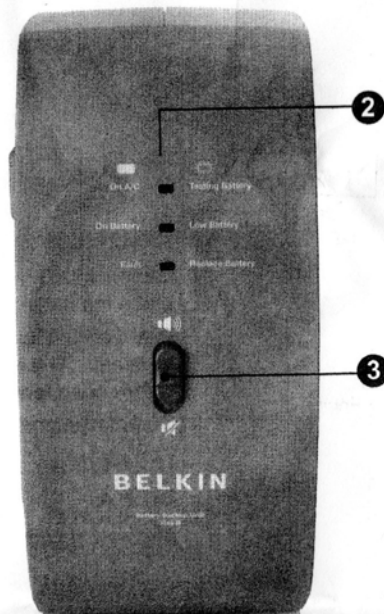

3 Mute on/off

Use this switch to turn the mute function on/off. The audible alarms will be silenced when mute switch is in ON (down) position.

Audible and Visual Alarms

The RG Battery Backup alarms to indicate certain events.

Front-Panel Label	Visual Indicator	Audible Alarm	Description
On A/C	Green LED lights 	None	The RG Battery Backup is operating on A/C.
Testing Battery	Green LED flashes 	None	The RG Battery Backup is conducting a self-test. This procedure is normal and will occur when the self-test is manually initiated and periodically thereafter (see page 8). This procedure will last approximately 5 minutes.
On Battery	Yellow LED lights 	Tone every 10 seconds	The RG Battery Backup is operating on battery power. The alarm will stop when the A/C power is restored.
Low Battery	Yellow LED flashes 	Tone every 1 second	The battery energy is running low. This alarm will continue until the unit performs a forced shutdown when the battery is depleted or A/C power is restored.
Replace Battery	Red LED flashes 	Tone every 5 seconds	The battery may have reached the end of its useful life. Conduct a self test (see page 8). If the alarm remains on, replace the battery as soon as possible to ensure proper operation of the RG Battery Backup (see page 9).
Fault	Red LED lights 	Continuous tone	A fault has occurred. Reset the RG Battery Backup (the unit) by: * Turn off the unit * Disconnect unit from the AC outlet * Reconnect unit to the AC outlet * Turn on the unit If the fault is not corrected, turn off the unit and disconnect from the AC outlet prior to checking Residential Gateway. If fault persists, contact Belkin for assistance.

NOTE: Audible alarm will not sound when mute switch is in ON (down) position.