


NOTE: The default remote for the application is incorrect.

To change the remote to the correct remote click the icon in the upper-left corner of the window:

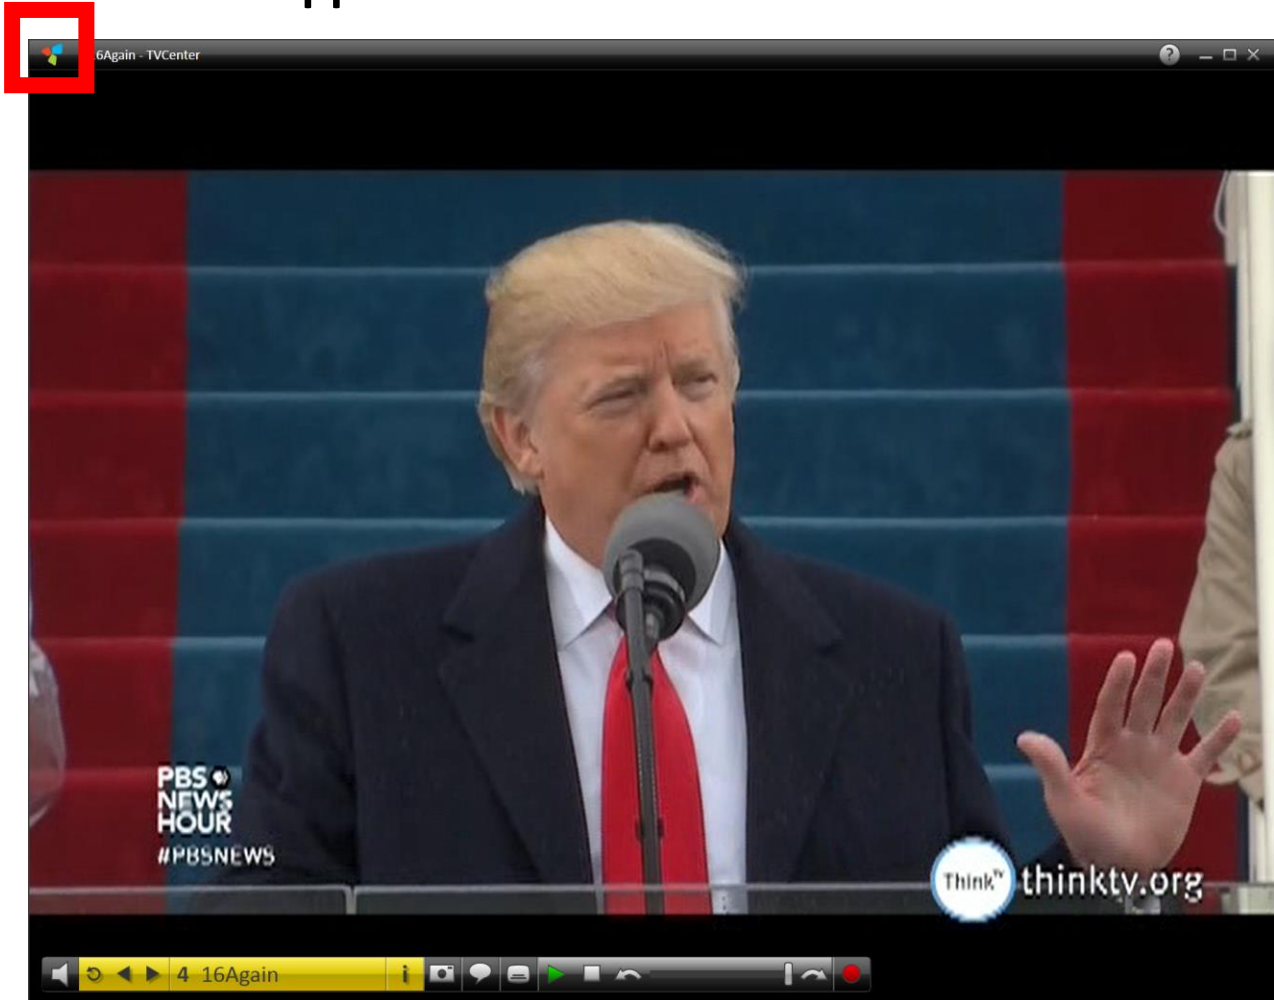


Then a Menu should appear, Click the gears in this menu:



Click the “Remote control” tab on the left side panel

Now click on the remote that came with your kit:

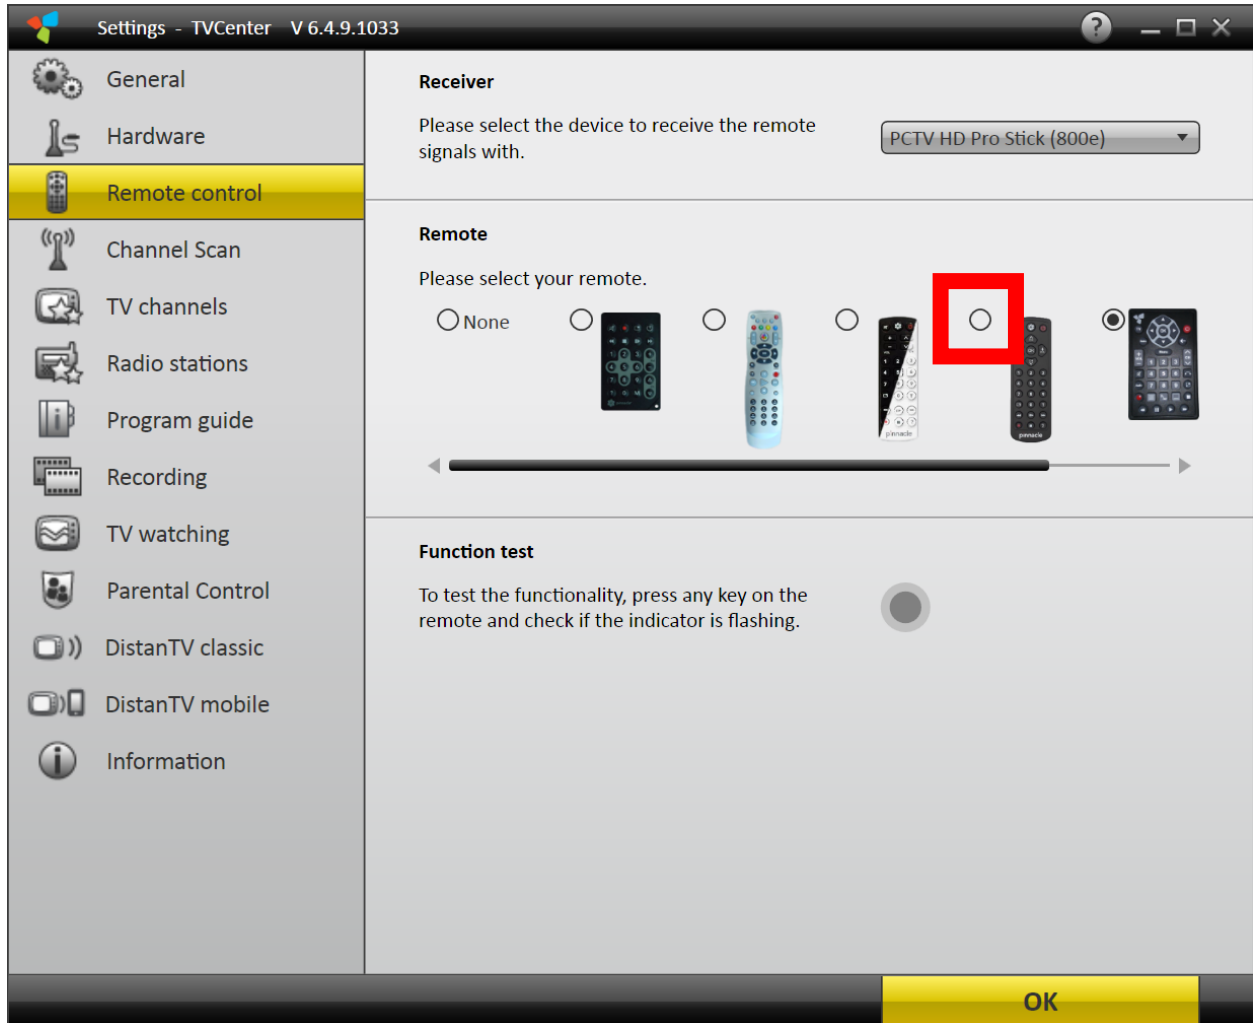

Then click “OK”

The remote should work properly now.