



○ = external PC board connections

* the variable DELAY ADJUST can be replaced with a fixed resistor (R1) on the PC board either R1 or the variable resistor should be used.

KØTTY		
TTY MOTOR CONTROL / KØX		
JPH	Rev 2.0 7/28/2012	VER 2.0