



○ = external PC board connections

* the variable DELAY ADJUST can be replaced with a fixed resistor (R1) on the PC board either R1 or the variable resistor should be used, NOT BOTH.

KØTTY		
TTY MOTOR CONTROL / KOX		
JPH	Rev 2.0	VER 2.0
	7/28/2012	