

FTM-400DR Cross Band Repeat

Entering Cross-band mode

1. Turn the APRS modem **Off**.
2. Set a UHF frequency in either the upper or lower display, using either the VFO or memory.
3. Set a VHF frequency in the other display, using either the VFO or memory.
4. Turn the FTM-400 **Off**.
5. Press and hold the lower **3** buttons to the right of the display (**DISP, F, & GM**) then press the **Power** button.
6. “**X-BAND Repeater**” **WILL** be displayed between the upper and lower frequency displays, if the FTM-400 transferred into cross-band repeater mode.

Exiting Cross-band mode

1. Turn the FTM-400 **Off**.
2. Press and hold the lower **3** buttons to the right of the display (**DISP, F, & GM**) then press the **Power** button.
3. “**X-BAND Repeater**” **WILL NOT** be displayed between the upper and lower frequency displays, if the FTM-400 transferred out of cross-band repeater mode.
4. Return the frequencies to your preferences.
5. Turn the APRS modem on, if you run APRS.