


- NOTES
- FOR ACTUAL WIND DIAGRAMS SEE 4401WD, 4402WD, 4403WD, 4373WD
 - IN ORDER TO USE THE POLAR ADAPTER SEPARATE THIS INTERFACE AND INSERT THE POLAR ADAPTER CIRCUIT SEE 5923WD
 - PROVIDE 181723 PLUG ASSEMBLY STRAP BETWEEN TERMINALS J1-1 AND J1-11 WHEN THE 181720 AUXILIARY POWER SUPPLY IS NOT USED
 - USE THE FOLLOWING FUSES:
 MOTOR 2.0 A 2.5 A
 181870 3.0 A 3.2 A
 - ON FO MACHINES USE 181452 CABLE ASSEMBLY (MOTOR HOLD) AND 1813453 CABLE ASSEMBLY (LOW FORM)

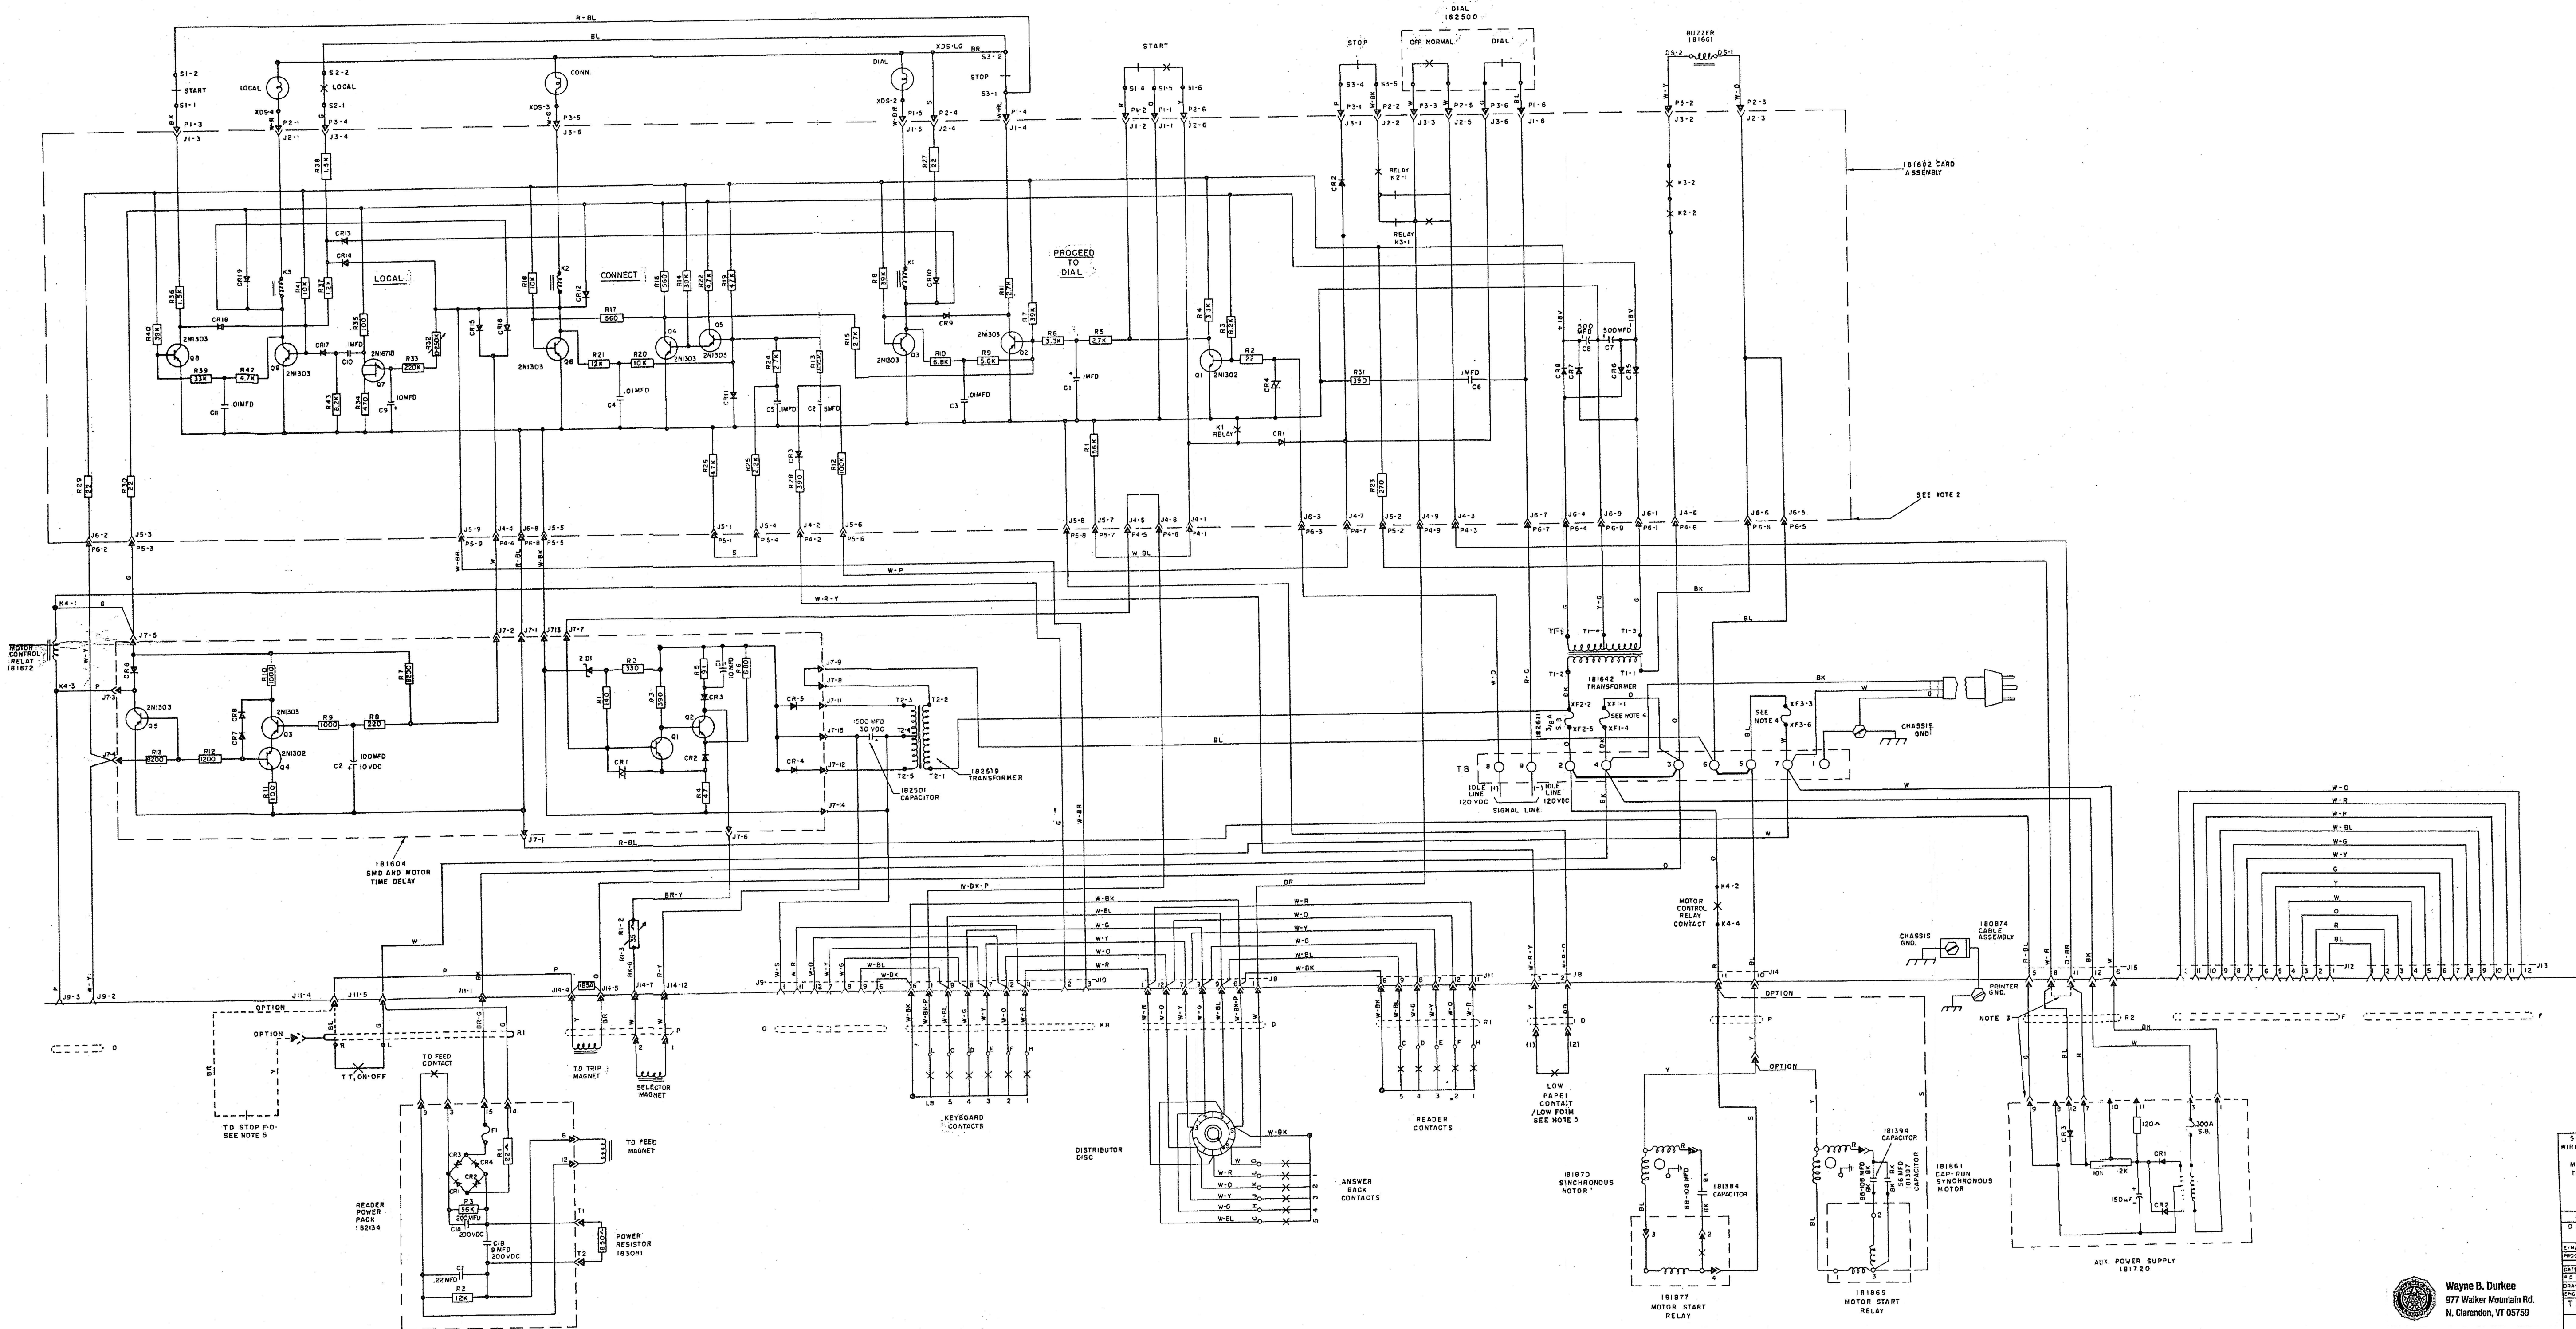

SCHEMATIC WIRING DIAGRAM FOR MODEL 32 TA, TC SET FOR TELETYPE

APPROVALS
 DATE: 11/22/54
 BY: W.B.D.

WAYNE B. DURKEE
 977 Walker Mountain Rd.
 N. Clarendon, VT 05759

6360 WD